


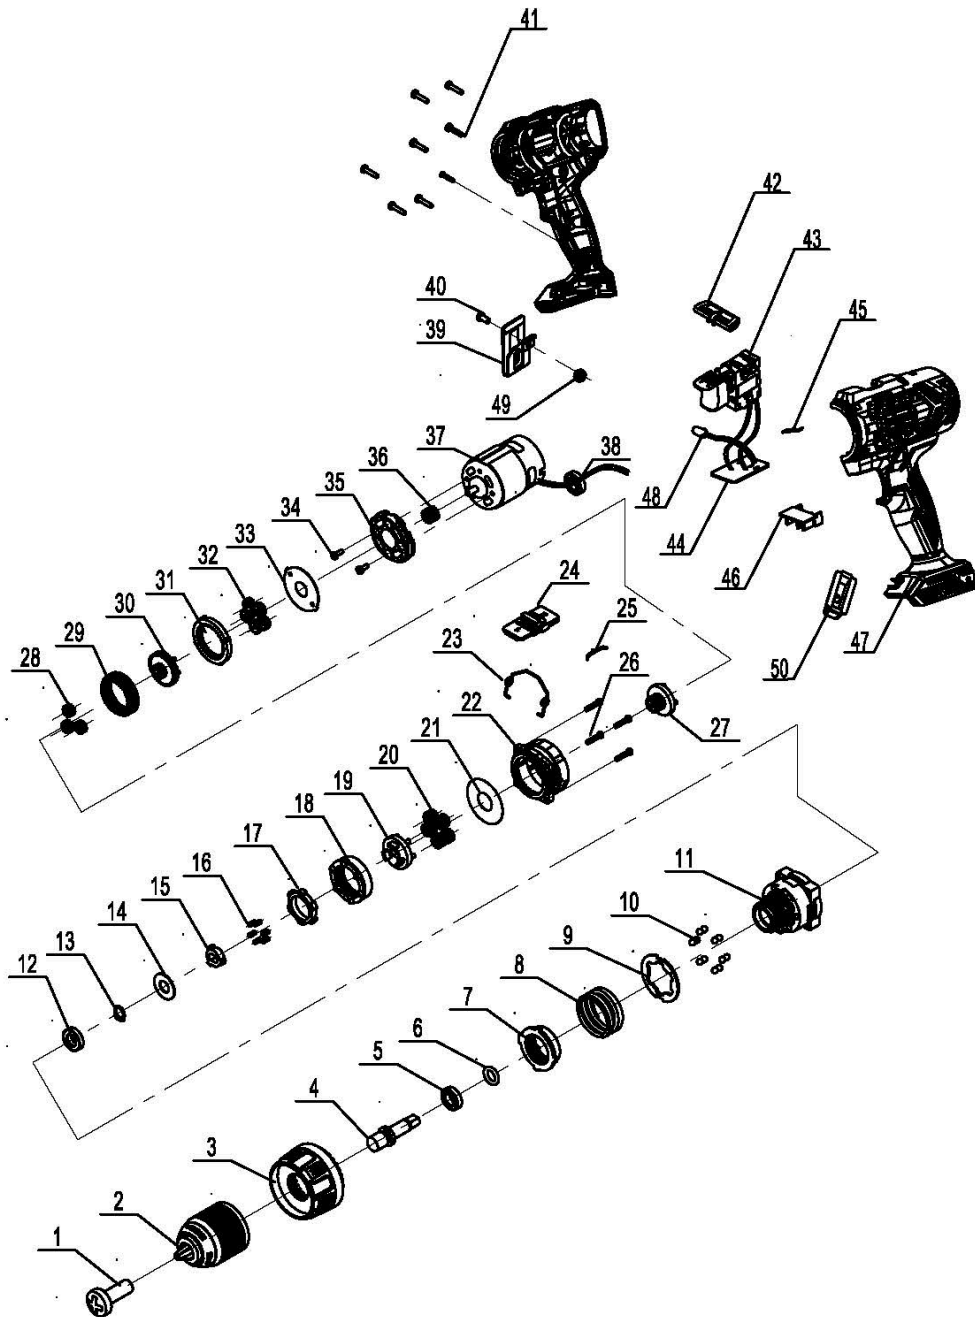

5909238900

cordless drill C-DD45-X
scheppach (DIY)





5909238900

cordless drill C-DD45-X
scheppach (DIY)

Main products

Spare part list

5909238900

371320 - 0299 - C-DD45-X - -

Spare	Description	additional	Item	Abb.	ConstructStatus
5909238001	chuck		2	A	*
5909238002	Shift push button		24	A	*
5909238003	20V 775 motor		37	A	*
5909238004	Beltclip		39	A	*
5909238005	switch		43	A	*
5909238006	control board		44	A	*
7909201708	battery SBP2.0 scheppach (DIY)		o.Abb.	A	*
7909201709	battery SBP4.0 scheppach (DIY)		o.Abb.	A	*
7909201710	battery charger SBC2.4A scheppach (DIY)		o.Abb.	A	*
7909201712	twincharger SDBC2.4A scheppach (DIY)		o.Abb.	A	*
7909201713	twincharger SDBC4.5A scheppach (DIY)		o.Abb.	A	*
7909201711	battery charger SBC4.5A scheppach (DIY)		o.Abb.	A	*
7909201720	Starter-Kit 2.0 SBSK2.0 scheppach (DIY)	2Ah battery + 2,4A battery charger included	o.Abb.	A	*
7909201721	Starter-Kit 4.0 SBSK4.0 scheppach (DIY)	4Ah battery + 2,4A battery charger included	o.Abb.	A	*
7906807701	HSS twist drill set 15 pcs. HSS15 scheppach (DIY)		o.Abb.	A	*
7906808701	wood drill bit set 15 pcs. WBS15 scheppach (DIY)		o.Abb.	A	*
7906809701	bit screwdriver set, 37 pcs. BSS37 scheppach (DIY)		o.Abb.	A	*
7906806701	masonry drill bit set 15 pcs. SBS15 scheppach (DIY)		o.Abb.	A	*

!!! Do you know: From now on you can view spare parts lists in our spare parts shop and order spare parts and accessories directly. More information can be found here: <https://www.scheppach.com/Shop.aspx>